
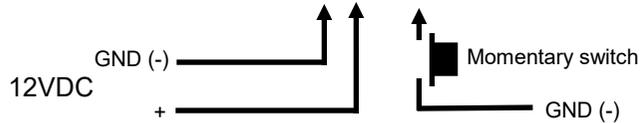


Example Application using a momentary switch.

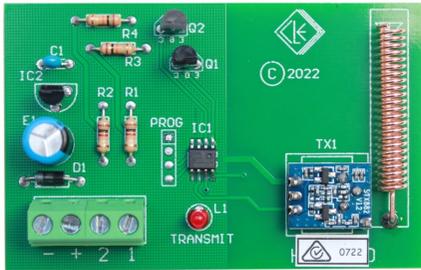

Specifications

Operating Voltage

Transmitter 9 to 14VDC
Receiver 12 to 24V AC or DC

Current Consumption @12V

Transmitter standby 1.8mA
Transmitting 43mA
Receiver standby 9mA
One relay activated 25mA
90mm(L) x 70mm(W) x 34mm (D)
Super heterodyne crystal locked
1 Amp MAX @ 24VDC
12VDC 0.5A switchmode
Keeloq™ code hopping 433.92Mhz
4.2 billion combinations

Enclosure dimensions

RF Receiver

Relay rating

Plug Pack transformer

RF signal

Warranty

Circuit Level Electronics (Aust) Pty Ltd warrants this product to be free from defects in materials and workmanship for a period of **2 Years** from date of purchase. We will in the event of failure repair or replace the product at our sole discretion. This warranty does not apply in the event of accidental damage, abuse, misuse, non approved purpose or act of God. This warranty is given in addition to any rights allowed by New South Wales law.

Made in Australia by
Circuit Level Electronics (Aust) Pty Ltd
ABN 51 074 517 570





Circuit Level Electronics reserves the right to change specifications without notice in the interest of product development.



PTP-TX/RX

2 Channel General Purpose Wireless Link

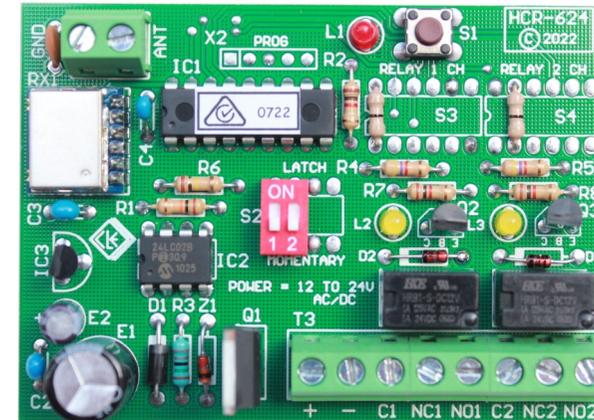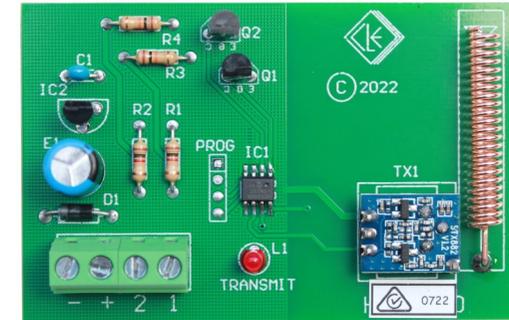

- Designed to suit outputs from alarm panels
- High performance transmitter
- Mini 12VDC plugpack for receiver or transmitter
- 2 x SPDT relay outputs @ 1Amp
- 2 YEAR Warranty



© 2022 Circuit Level Electronics (Aust) Pty Ltd


Overview

This product is a general purpose wireless link. The transmitter channels are simply triggered by the connection of the input terminal to GND. This can be via a momentary switch, relay or as designed, the programmable outputs from an alarm panel. The transmitter would generally be powered from the device that is being used to trigger it, however any regulated 9 to 14VDC power source will work. The kit is supplied with a small switch mode 12VDC 0.5Amp plug pack which can be used to power either the transmitter or receiver.

Bosch DSRF™

The PTP TX/RX kit is particularly useful for operating remote gates or doors from the alarm panel outputs of a Solution™ system using DSRF™ equipment. The two RF systems operate on different frequencies thus there is no interference between the two. In the case where no wiring has been installed or allowed for, to remote devices this system is an ideal option.

PCB Layout & Installation

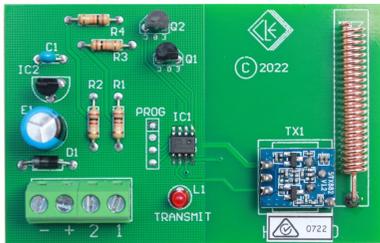


Transmitter

The transmitter unit should be installed close to the device triggering it. DO NOT install in a metal cabinet.

For best performance operate from a 9 to 14VDC regulated power source. The RED LED indicates transmission.

Transmission is restricted to 30 seconds maximum if the input is held to GND.

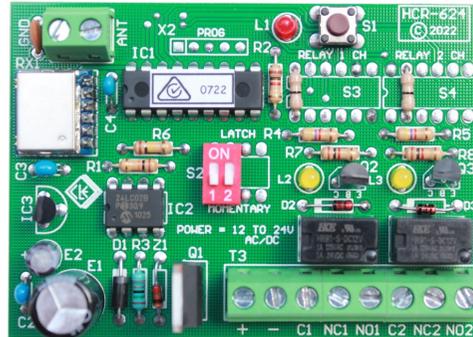

Receiver

The receiver has two (2) SPDT relay outputs to control devices. DO NOT switch mains voltages (240VAC) with these relays. Install the receiver clear of metal structures as per the transmitter. Moving the antenna position may change the RF performance. The supplied plug pack is intended for powering the receiver, however it can be used on either device.

Set Up

The PTP-TX/RX kit is supplied with the transmitter learnt to the receiver. Both of the relay outputs are set as momentary. This can be changed so that either or both outputs will latch.

1. Delete the transmitter by pressing and holding down the receiver LEARN button. The RED LED will light and then extinguish after 4 seconds.
2. Learn the transmitter by pressing the LEARN button once, the RED LED will flash rapidly. Now transmit a signal from the transmitter to be learnt.
3. Press the LEARN button once to leave learn mode. If you fail to do this the receiver will automatically exit after 20 seconds of no activity.
4. To set a relay to latch move the DIP switch 1 or 2 to the ON position corresponding to the relay.

Plug pack

The 12VDC 0.5A plug pack transformers polarity should be verified before connection to the transmitter or receiver using a multimeter.

Bosch™ DSRF™ connection & programming

1. Mount the transmitter box external to the Solution 16Plus™ or other DSRF compatible control panel.
2. Connect the +12 and GND terminals to the same in the panel. Connect the required programmable output/s to the appropriate input channel/s of the transmitter.
3. Program the output/s of the panel as **Normally open one shot lo**.
4. Program the time parameter for **2 seconds**.
5. With the DSRF receiver set up to operate the outputs on the panel press the  or  on the DSRF fob. The PTP transmitter LED should flash for two seconds indicating RF transmission.
6. Install the receiver, connect to power and device to be controlled.

SPECIAL NOTES

1. This product is NOT COMPATIBLE with the Bosch RE005EV2, WE800EV2, HCR-15 or HCR-100 products.
2. This product operates on 433.92Mhz and thus cannot be used in conjunction with other 433.92Mhz RF equipment where there may be transmissions at the same time.
3. **The receiver now supplied can operate from 12 to 24V AC or DC.**